


AC Prochassis Skid Plate Instructions

- Line up skid plate on chassis and mark rivets to be drilled.
- Use a drill stop set to 1/4" and drill existing rivets
- Remove 2 Factory Bolts and Reinstall through Skid Plate
- Install long rivets in 6 rear holes and engine mount(800 only)
- Drill 3 remaining holes and install all remaining rivets

Drill these holes last
Be sure to use a drill stop

Reuse Factory Bolts

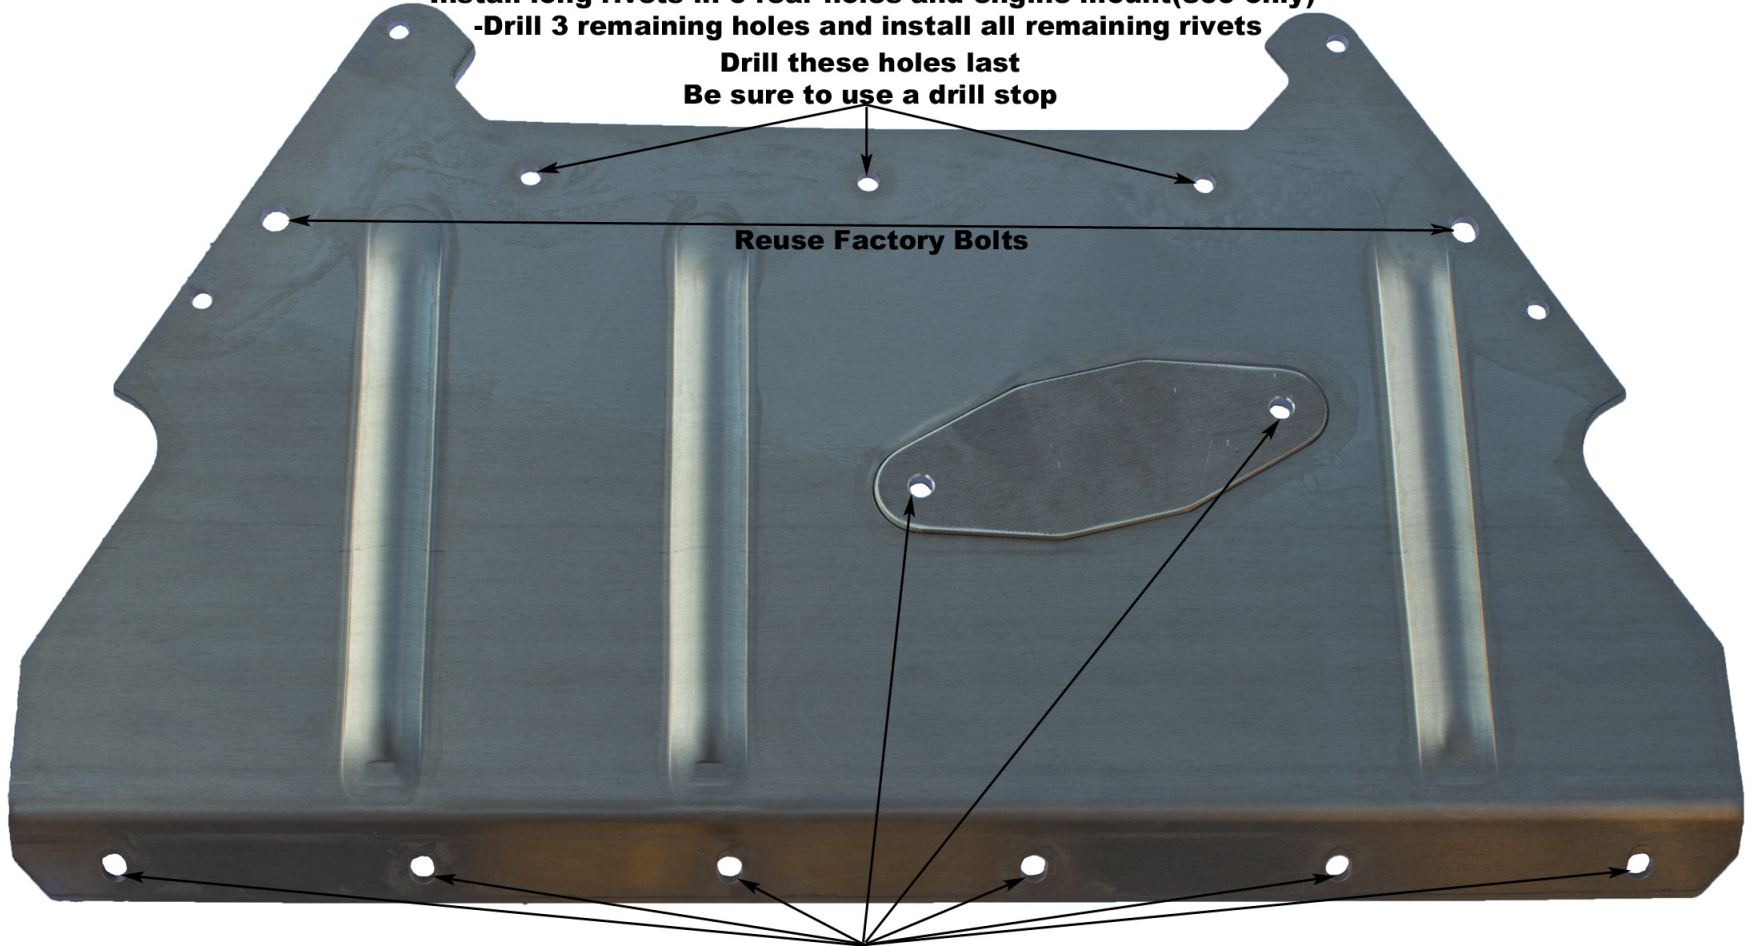

Use Longer Rivets in these holes
-Note 4 strokes use screws in access cover